



CDP-101 Case panel removal


Removal of top case and under panel

Top Case

1. Turn player upside down
2. Locate and remove the 2 screws (Blue) on each side securing the top case
3. Turn player right side up, push case top back about 3cm
4. It may jam, which is caused by grounding tags catching on the back edge of the case top. Pull back edge up a little to release.
5. Lift off case top

Bottom Panel

1. Turn player upside down
2. Loosen the 3 screws (Red) at the rear edge of the panel so they protrude as much as possible without being loose.
3. Remove the 3 screws (Green) at the front edge of the panel
4. Lift up the panel slightly at the front and pull towards you to release

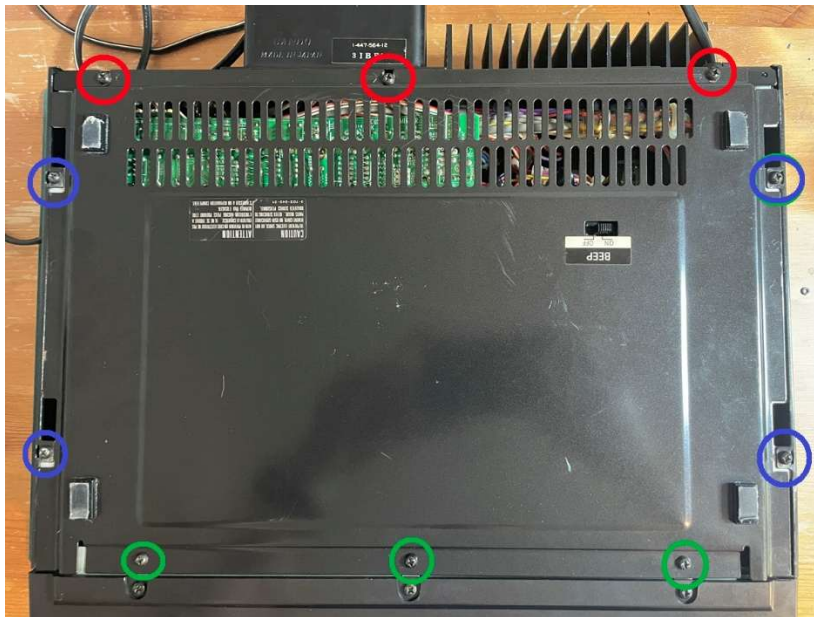

Note: removing the bottom panel removes the feet causing the player to rest on the beep switch and laser pick up assembly. Having the 3 rear screws protrude mitigates this to some degree.